

George.
home



GJK302SS-16 Stainless Steel Kettle

User Guide

220-240V~50/60Hz, 1850-2200W

IMPORTANT: RETAIN FOR FUTURE REFERENCE

About this guide

We've written this manual to help you get the most from your stainless steel kettle. Please hold on to it for future reference.

WARNINGS:

THIS PRODUCT WAS DESIGNED AND MANUFACTURED TO MEET STRICT QUALITY AND SAFETY STANDARDS. THERE ARE, HOWEVER, SOME OPERATION PRECAUTIONS YOU SHOULD BE AWARE OF.

 
CAUTION. RISK OF SCALDING. DO NOT OPEN LID WHILST KETTLE IS HOT. BE CAREFUL WHEN POURING BOILING WATER FROM YOUR KETTLE AS THIS CAN RESULT IN INJURY. ENSURE THE SWITCH IS NOT OBSTRUCTED OR THE KETTLE WILL NOT SWITCH OFF.

- 1. Read all warnings & instructions in this manual to ensure you get the best out of your product.**
- 2. For household use only. Not for use outdoors.**
- 3. This appliance is only suitable for domestic use and is not designed for commercial purpose.**
- 4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.**
- 5. Before connecting the kettle to the power, check the voltage shown on the appliance corresponds with the voltage in your home. If it doesn't, contact your local store.**
- 6. Do not use if the appliance, cord or plug is damaged.**
- 7. The cord shouldn't hang over the edge of a table or counter, or touch a hot surface.**
- 8. Keep away from hot gas and electrical burners.**
- 9. Remove all packaging prior to use. Inspect the product for any damage before use. If damage is found, notify ASDA to exchange the product.**
- 10. Keep away from harsh or abrasive cleaning agents or solvents.**

11. Do not use attachments not recommended by the manufacturer.
12. Don't use the kettle for anything other than its intended use.
13. Please don't dismantle. If a fault occurs, have the kettle inspected in a qualified repair shop or return to us at Asda.
14. To avoid fire, electric shock, or injury, never immerse the kettle, cord, or plug in water or liquid. Do not use with wet hands.
15. Always disconnect the appliance from the supply before cleaning and when not in use. Allow to cool.
16. Always place on a firm, level surface, out of reach of children.
17. If the kettle is overfilled, boiling water may be ejected.
18. Extreme caution must be used when moving an appliance containing hot water.
19. Only use the kettle with the base provided. Do not use the base for any other purpose.
20. Do not touch hot surfaces. Use the handle.
21. Be careful when refilling an already hot kettle.
22. Avoid boiling without water as this can damage the heating elements.
23. Always make sure the lid is closed while the kettle is boiling and avoid contact with the steam coming from the spout.
24. When pouring, don't tip the kettle too fast. Always use the handle and don't touch the body (as this can get very hot).
25. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
26. This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
27. Children shall not play with the appliance.
28. This appliance is not intended to heat any liquid other than water.
29. ASDA does not recommend allowing children to operate this appliance.


You should have

Stainless steel kettle & power base

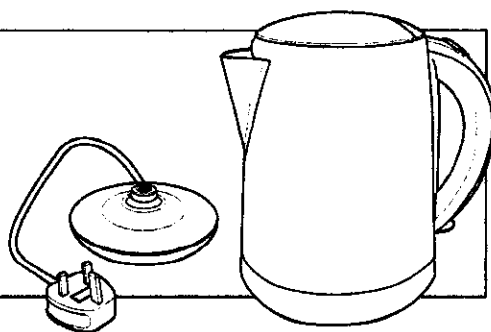

How to...

 
...recognise the parts of your kettle

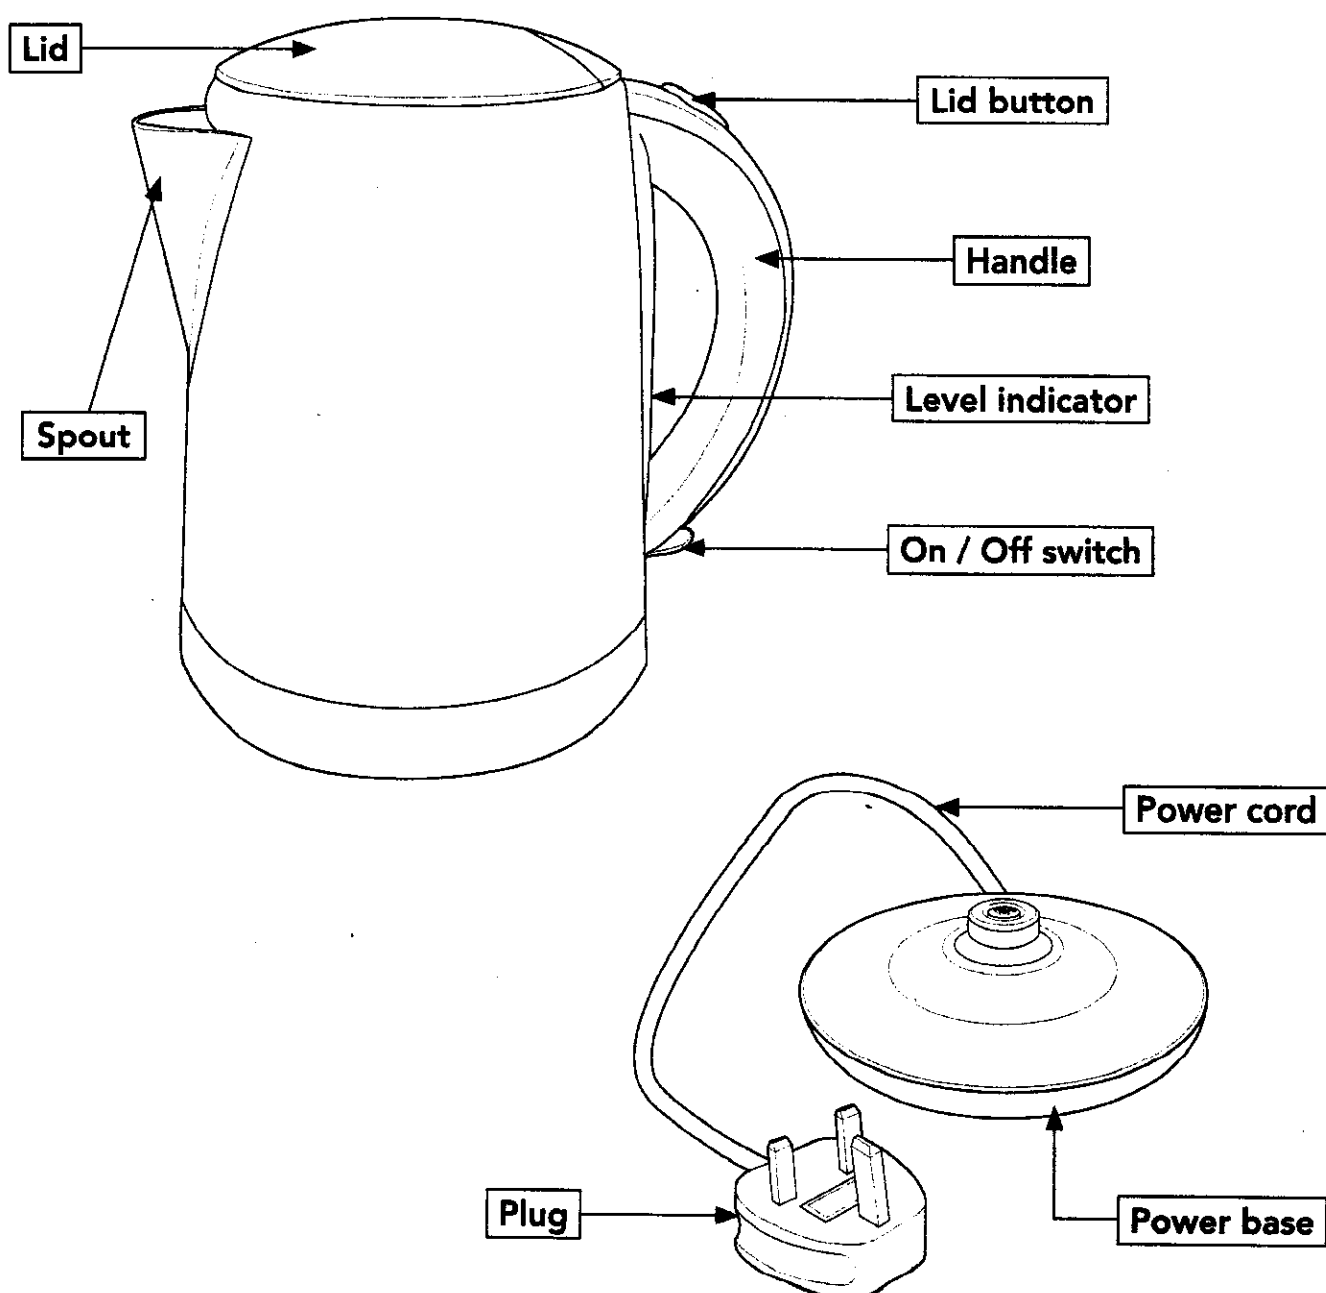


How to...

...plug the power base in

 
1. Unwind the power cable to your desired length.

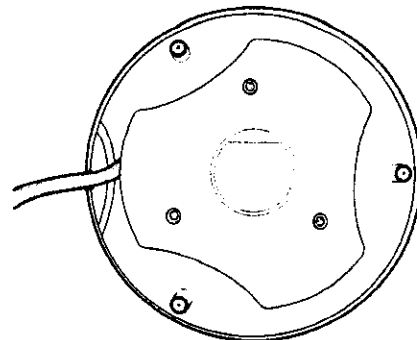

 
2. Fit the power cable firmly into the base slot, so it's stable.

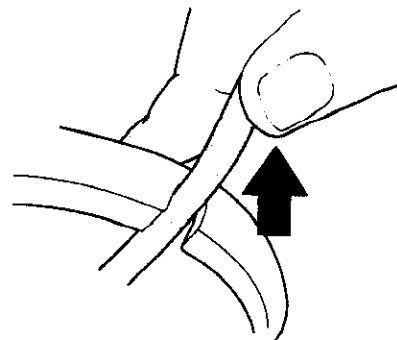

 3. Remove the plug cover.

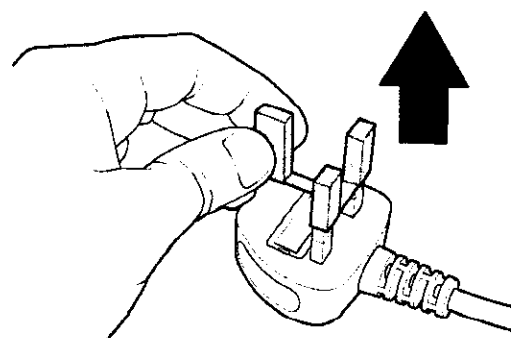

 4. Pop the plug into an electrical socket and turn the power on.

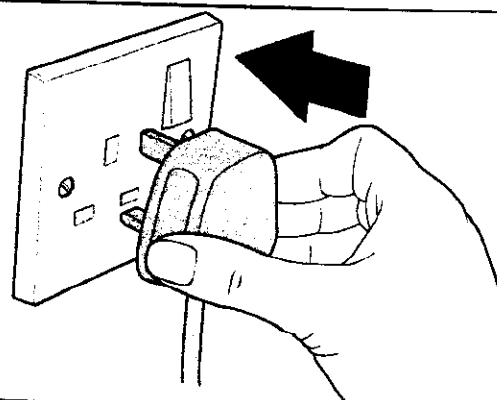

How to...

...use your stainless steel kettle

 
Please note

If you're using the kettle for the first time, we recommend cleaning before use by boiling and discarding a full kettle of water twice. Then simply wipe the surface down with a damp cloth.


If you accidentally boil the kettle when it's empty, the kettle will switch off automatically. If this happens, allow the kettle to cool before filling it with cold water and re-boiling. You can shut off the power whilst the kettle is boiling by pushing the on/off switch up.

1. Push the button on the top of the handle inwards (1) and the lid will pop open (2).


Fill the kettle with water to your desired level, ensuring you don't exceed the MAX level marker.

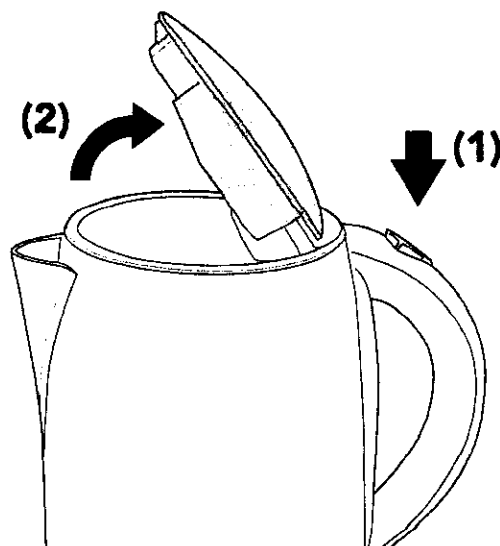

 2. Push the lid closed and place the kettle on to the base, making sure it is seated correctly.

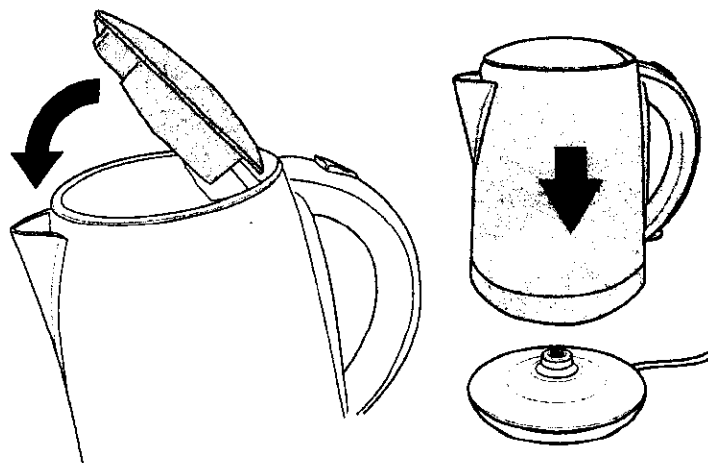


 3. The inside of your kettle is equipped with a '1 CUP' indicator. If you only wish to boil enough water for one cup, please fill your kettle with water to just above this level. Filling the kettle below the one cup mark can overheat the elements and cause damage.

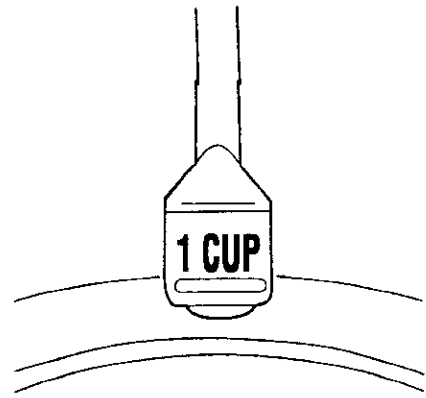

4. Push the switch on the back of the kettle down to boil. The light for the on/off switch will illuminate to let you know boiling has begun.

 The kettle will automatically switch off once the water has boiled.

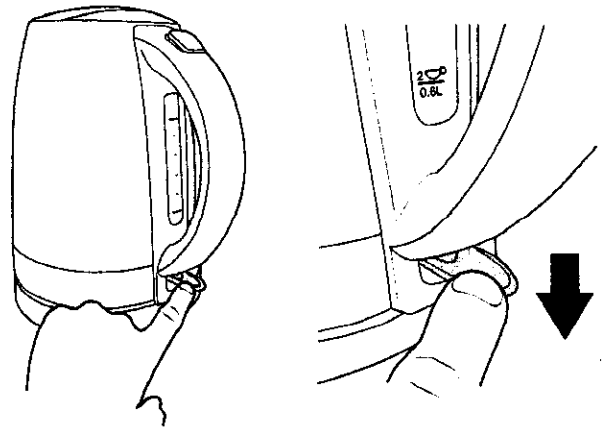

How to...

...de-scale your stainless steel kettle

Your kettle should be de-scaled regularly, depending on how often you use it and how hard your water is. Excessive scale can cause the kettle to switch off before boiling and may damage the elements, affecting your warranty.

To de-scale, simply purchase an all-purpose de-scaling product suitable for your kettle and follow the instructions on the pack. Ensure the electrical connections are completely dry before using the kettle.

How to...

...clean the filter

Make sure the device is disconnected from the power outlet, and the kettle is empty and completely cool.

1. To clean the filter, remove it by carefully pulling the tab inwards, towards the centre of the kettle and then removing it from the kettle.
2. Wash in warm, soapy water and rinse thoroughly.
3. Refit the filter and ensure it clicks back into place (unless the filter is fitted correctly, the kettle lid may not close and lock securely).

How to...

...clean the kettle

 
Make sure the device is disconnected from the power outlet, and the kettle is empty and completely cool.

To clean the kettle body, simply wipe the exterior with a damp cloth (do not use abrasive cleaners). Dry with a soft cloth.

How to...

...change the fuse

1. Only use a 13 amp fuse.
2. To change the fuse, place a screwdriver into the recess of the plug cover and pull the fuse holder upward until it's free.
3. Slide the fuse out and pop in the replacement.
4. Slot the fuse holder back into the recess and push down until it locks into place.

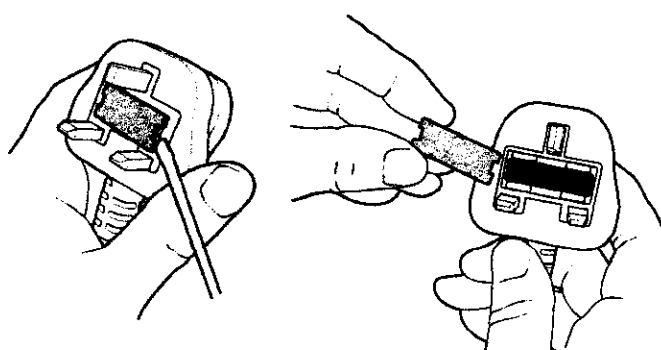

100 DAY SATISFACTION GUARANTEE

If for any reason you're not completely satisfied with our product, return it within 100 days with your proof of purchase, and we'll give you an exchange or a refund.

UK Mainland stores only.

Excludes franchises.

The guarantee excludes flat pack furniture, which can't be returned if it has been partly or fully assembled unless faulty or mis-described.

Also excludes mattresses, which can't be returned for hygiene reasons once used, unless faulty or mis-described.

Need something else?

www.GEORGE.com

We have a wide range of accessories and other products that can be ordered direct to your door.

Customer services information

If you have any problems, need more information or spare parts, or even just some advice on your product, then don't hesitate to contact customer services at the telephone number or address shown opposite. N.B. When calling or writing please have your product site code handy.

Call

0800 952 0101

Write

ASDA Stores Ltd. Asda House, Southbank,
Great Wilson Street, Leeds, LS11 5AD.

Product name: **GJK302SS-16 Stainless steel kettle**

Product site code: **15A.08.16.152**