 


WF9904RWE WF9804RWE

# Washing Machine user manual



Thank you for purchasing this Samsung product. To receive a more complete service, please register your product at

www.samsung.com/register











# features of your new samsung washing machine

Your new washing machine will change the way you feel about doing laundry. From its super-size capacity to its energy efficiency, your new Samsung washing machine has all the benefits to make washing laundry as easy and as pleasant as possible.

# Energy Saving A+AA

We've made the grade! Samsung's WF9904 the latest in our hightech 1400 rpm spin models, has achieved a triple 'A' rating. Samsung's new premium washing machine achieved top levels of Energy Saving performance. The WF9904(9kg) even offers 20% more efficient energy use compared to standard A rated machine with the special Aqua Shower system and smart control. The WF9804(8kg) model offers 10% more efficient energy use than a standard 'A' rated machine.

# Quiet Drive

Samsung's unique Quiet Drive Motor offers a quiet wash unheard of among other washers. The motor works without belts or gears, reducing vibration and making the washer quieter and more durable.

# Air Refresh (selected models)

Refresh your favourite clothes simply with hot air; ideal for instance if you've been out on the town in your best suit or frock and have been exposed to cigarette smoke. Rather than having to deal with a full wash cycle or perhaps even a visit to the dry cleaner, non-stained clothing does not need to be washed - simply refresh it. 3 different cycles are available for various kinds of fabrics.

# Super EZ Iron (selected models)

Ironing is a major chore and takes too much time. The new super easy iron function is a specialized laundry setting that helps eliminate wrinkles, so that you can spend less of your valuable time ironing and your outfit looks fresh.

# Eco Drum Clean (selected models)

Using Eco Drum Clean helps to keep your washing machine clean even without any chemical detergent or bleach. Keep your drum cleansed and odourless with this specialized cleaning program.

# Ceramic Heater for Durability & Energy Saving (selected models)

Our truly innovative Ceramic Heater is twice as durable as regular heaters. That saves you money on repairs, plus it eliminates the scale of hard water and saves energy.

# Silver Wash - Silver Wash Health System (Selected models)

The winning combination! Samsung's silver technology combines the sanitizing effect of silver with state-of-the-art science for the ultimate in clean. During a wash cycle, tiny particles of silver from the Silver metal plates are gradually converted into silver ions through electrolysis. Even in cold and bleach less water, the silver particles in the water remove odour causing bacteria for a "super clean" wash. So washing in cold water is energy efficient and better for your clothes. The Silver plates carry a warranty of ten years for 2 cycles run per week, and these plates can easily be replaced by a Service Technician if needed.







# Baby Care System

Your Samsung washing machine includes wash programs that adds protection to the clothing of children with sensitive skin. These programs reduce skin irritation in children by minimizing detergent residue. In addition, these programs classify laundry into various types and the wash is performed according to the laundry characteristics so that children's clothes feel refreshingly clean whenever they are put on.

# Child Lock

The Child Lock function ensures that curious little hands are kept out of your washing machine.

This safety feature stops your children from playing with the operation of the washing machine, and alerts you when it is activated.

# Wool Certified

The machine has been tested and passed the required Woolmark Company specification for machine washable wool products.

Fabrics should be washed according to the instructions on the garment label as specified by Woolmark and Samsung.

# Delay End

Delay a cycle for up to 19 hours in one-hour increments and increase the convenience of using your washing machine especially when you have to go out.

# Quick Wash

No time to lose! Less than 30 minutes wash will give you time to run out before it's too late. Our 29 minute Quick Wash program can be the solution to your busy life. Now you can wash your favourite clothes in only 29 minutes!

# Delicates & Hand Wash Program

Special care can be determined by the appropriate temperature, the gentle wash action and the appropriate amount of water.

# Digital Graphic Display

The Digital Graphic Display control panel is clear and easy to use for minimum fuss and hassle. And while it is easy to operate, the Digital Graphic Display enables you to make quick and accurate adjustments to your wash for excellent washing results.

## Wide door

Extra wide door aperture for convenient viewing! Easily add and remove laundry, especially for large sized laundry items such as bedding, towels etc.

This manual contains important information on the installation, use, and care of your new Samsung washing machine. Refer to it for descriptions of the control panel, instructions on how to use the washing machine, and tips for making the most of its state-of-the-art features and functions. The "Troubleshooting and information codes" section on page 29 tells you what to do if something goes wrong with your new washing machine.







# safety information

Throughout this manual, you'll see Warning  $\triangle$  and Caution  $\triangle$  notes. These warnings, cautions, and the important safety instructions that follow do not cover all possible conditions and situations that may occur. It's your responsibility to use common sense, caution, and care when installing, maintaining, and operating your washing machine. Samsung is not liable for damages resulting from improper use.

# IMPORTANT SAFETY SYMBOLS AND PRECAUTIONS

# What the icons and signs in this user manual mean:

WARNING	Hazards or unsafe practices that may result in severe personal injury or death.
CAUTION	Hazards or unsafe practices that may result in minor personal injury or property damage.
CAUTION	To reduce the risk of fire, explosion, electric shock, or personal injury when using your washing machine, follow these basic safety precautions:
	Do NOT attempt.
$\mathbb{X}$	Do NOT disassemble.
<b>8</b>	Do NOT touch.
*	Follow directions explicitly.
	Unplug the power plug from the wall socket.
<b>=</b>	Make sure the machine is grounded to prevent electric shock.
	Call the service center for help.
Ø	Notice

These warning signs are here to prevent injury to you and others. Please follow them explicitly.

After reading this section, keep it in a safe place for future reference.



Read all instructions before using the appliance.

As with any equipment using electricity and moving parts, potential hazards exist. To safely operate this appliance, become familiar with its operation and exercise care when using it.

Install and store your washing machine inside, away from exposure to weather.

Install and level your washing machine on a floor that can support its weight.



Your washing machine must be properly grounded. Never plug it into an ungrounded outlet.









To reduce the risk of fire or explosion:

- Do not wash items that have been washed, soaked, or treated with gasoline, dry cleaning solvents, or other flammable or explosive substances. They give off vapors that could ignite or explode. Rinse by hand any material that has been exposed to cleaning solvent or other flammable liquids or solids before putting in your washing machine. Be sure that all traces of such liquids, solids, and fumes have been removed. Dangerous substances include acetone, denatured alcohol, gasoline, kerosene, certain liquid household cleaners and spot removers, turpentine, waxes, and wax removers.
- Do not put gasoline, dry cleaning solvents, or other flammable or explosive substances into the washing machine.
- Under certain conditions, hydrogen gas may be produced in a hot water system-such as your hot water heater -- that has not been used for two weeks or more. HYDROGEN GAS IS EXPLOSIVE. If your hot water system has not been used for two weeks or more, turn on all hot water taps in your home, and let the water flow for several minutes before using your washing machine. This will release any hydrogen gas build-up. Since hydrogen gas is flammable, do not smoke or light an open flame during this time.

Ventilate immediately without touching the power plug if there is a gas leak.



Unplug the power cord before servicing your washing machine.

Before each wash, empty the pockets of your laundry. Small, irregularly shaped hard objects, such as coins, knives, pins, and paperclips could damage your washing machine. Do not wash clothing with large buckles, buttons, or other heavy metal metal.

Do not open the door of the washing machine if you can still see water. Check that the water has drained before opening the door.



Do not repair, replace, or service any part of your washing machine yourself unless you fully understand the recommended user-repair instructions and have the skills to carry them out. Work done by an unauthorized person may void your warranty.

Connect the washing machine to the water mains using the new set of hoses. Do not reuse the old set of hoses.

Water inlet hoses deteriorate over time. Check the hoses periodically for bulges, kinks, cuts, wear, and leaks, and replace them as needed and at least every five years.

All packaging and shipping bolts must be removed before the appliance is used. Serious damage may occur if they are not removed. See page 12 "Removing the shipping bolts".



Before washing clothes for the first time, you must run a complete cycle without clothes. See "Washing for the first time".







# satety intorm

The appliance is designed for home use only.



Make sure that water and electrical connections are made by qualified technicians, WARNING observing the user manual (see "Installing your washing machine") and local safety



Before cleaning or carrying out maintenance, unplug the appliance from the electrical outlet.

Always unplug the appliance and turn off the water after use.

Make sure that the pockets of all clothing to be washed are empty.

Hard, sharp objects, such as coins, safety pins, nails, screws, or stones can cause extensive damage to the appliance.

Never allow pets and children to play on or in the appliance. It may cause injury or suffocate

The glass door becomes very hot during the washing cycle. Never touch on the glass door while it is in use.



Do not attempt to repair the appliance yourself. Repairs made by inexperienced or unqualified persons may cause injury and/or make more serious repairs to the appliance necessary.

If the plug (power supply cord) is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

This appliance should only be serviced by our authorized service center, and only rated spare parts should be used.



Do not let children (or pets) play on or in your washing machine. The washing machine door WARNING does not open easily from the inside, and children may be seriously injured if trapped inside.



This appliance is not intended for use by persons (including children) with reduced physical, WARNING sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

Young children should be supervised to ensure that they do not play with the appliance.

To use this appliance safely, the user should become familiar with the instructions for operation of the appliance and always take extra care when using it.

This appliance should be positioned to be accessible to the power plug, the water supply tabs and the drain pipes.



Packing materials can be dangerous to children; keep all packing material (plastic bags, WARNING polystyrene, etc.) well out of the reach of children.

Do not use processed water containing oil, cream or lotion, which is usually found in skincare shops or massage clinics.

· Otherwise this will cause the packing to be deformed, which causes a malfunction or water leak.









A stainless washing tub does not usually rust. However if some metal such as a hair pin is left in the tub for an extended time, the tub could rust.

- Do not leave water or bleach containing chlorine in the tub for an extended period of time
- Do not regularly use or leave water containing iron in the tub for an extended period of time. If rust starts appearing on the surface of the tub, apply a cleansing agent (neutral) to the surface and use a sponge or soft cloth to clean it. (Under no circumstances use a metal brush)

For washing machines with ventilation openings in the base, ensure that the opening is not obstructed by carpet or any other obstacles.

Use the new hose-sets and old hose-sets should not be reused.

# Instruction about the WEEE mark

# Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

# (Applicable in the European Union and other European countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.







# **SETTING UP YOUR WASHING MACHINE**

- 9 Checking the parts
- 10 Meeting installation requirements
- Electrical supply and grounding 10
- 10 Water Supply
- 11 Drain
- 11 Flooring
- 11 Surrounding temperature
- 11 Alcove or closet installation
- Installing your washing machine 11

 
## WASHING A LOAD OF LAUNDRY



- Basic instructions 17
- 18 Using the control panel
- 20 Child lock
- 20 Sound off
- 20 Delay end
- 21 Air Refresh
- 22 Washing clothes using the cycle selector
- 23 Washing clothes manually
- 24 LAUNDRY GUIDELINES
- 25 Detergent and additives information
- 25 Which detergent to use
- 25 Detergent drawer

# **CLEANING AND MAINTAINING YOUR WASHING MACHINE**





- 27 Cleaning the exterior
- Cleaning the detergent drawer and drawer
- 29 Cleaning the debris filter
- 29 Cleaning the water hose mesh filter
- 29 Repairing a frozen washing machine
- Storing your washing machine

# TROUBLESHOOTING AND **INFORMATION CODES**

30 Check these points if your washing machine...

Information codes

**CYCLE CHART** 

32 Cycle chart



**APPENDIX** 

33 Fabric care chart

**33** Protecting the environment

33 Declaration of conformity

34 Specifications

8 contents




# setting up your washing machine

Be sure to have your installer follow these instructions closely so that your new washing machine works properly and so that you're not at risk of injury when doing laundry.

# CHECKING THE PARTS

Carefully unpack your washing machine, and make sure you've received all of the parts shown below. If your washing machine was damaged during shipping, or if you do not have all of the parts, contact Samsung Customer Service or your Samsung dealer.

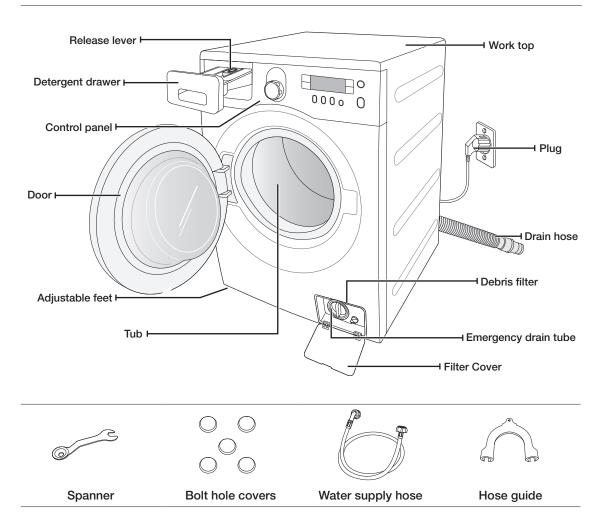







# setting up your washing machine

# MEETING INSTALLATION REQUIREMENTS

# Electrical supply and grounding

To prevent unnecessary risk of fire, electrical shock, or personal injury, all wiring and grounding must be done in accordance with the National Electrical Code ANSI/FNPA, No. 70 Latest Revision and local codes and ordinances. It is the personal responsibility of the appliance owner to provide adequate electrical service for this appliance.



Never use an extension cord.

WARNING Use only the power cord that comes with your washing machine.

When preparing for installation, ensure that your power supply offers:

- 220V~240V 50Hz 15 AMP fuse or circuit breaker
- Individual branch circuit serving only your washing machine

Your washing machine must be grounded. If your washing machine malfunctions or breaks down, grounding will reduce the risk of electric shock by providing a path of least resistance for the electric current.

Your washing machine comes with a power cord having a three-prong grounding plug for use in a properly installed and grounded outlet.



Never connect the ground wire to plastic plumbing lines, gas lines, or hot water pipes.

Improperly connecting the equipment-grounding conductor can result electrical shock. Check with a qualified electrician or serviceman if you are unsure if the washing machine is properly grounded. Do not modify the plug provided with the washing machine. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.

# Water Supply

Your washing machine will fill properly when your water pressure is 50 kPa ~ 800 kPa. Water pressure less than 50 kPa may cause water valve failure, not allowing the water valve to shut off completely. Or, it may take the washing machine longer to fill than what the controls allow, resulting in your washing machine turning off. (A fill-time limit, designed to prevent overflows/ flooding if an internal hose becomes loose, is built into the controls.)

The water taps must be within 4 feet (122cm) of the back of your washing machine for the provided inlet hoses provided to reach your washing machine.



Most plumbing supply stores sell inlet hoses of various lengths up to 10 feet (305cm) long.

You can reduce the risk of leaks and water damage by:

- Making water taps easily accessible.
- Turning off taps when the washing machine is not in use.
- · Periodically checking for leaks at water inlet hose fittings.



 $_{\text{NG}}$  Before using your washing machine for the first time, check all connections at the water valve and taps for leaks.









## Drain

Samsung recommends a standpipe height of 18 in (46 cm). The drain hose must be routed through the drain hose clip to the standpipe. The standpipe must be large enough to accept the outside diameter of the drain hose. The drain hose is attached at the factory.

# Flooring

For best performance, your washing machine must be installed on a solidly constructed floor. Wood floors may need to be reinforced to minimize vibration and/or unbalanced loads. Carpeting and soft tile surfaces are contributing factors to vibrations and the tendency for your washing machine to move slightly during the spin cycle.

Never install your washing machine on a platform or poorly supported structure.

# Surrounding temperature

Do not install your washing machine in areas where water may freeze, since your washing machine always retains some water in its water valve, pump, and hose areas. Frozen water in the lines can cause damage to belts, the pump, and other components.

# Alcove or closet installation

To operate safely and properly, your new washing machine requires minimum clearances of:

Sides - 25 mm Rear - 51 mm Top - 25 mm Front - 465 mm

If both the washing machine and a dryer are installed together, the front of the alcove or closet must have at least 465 mm unobstructed air opening. Your washing machine alone does not require a specific air opening.

# INSTALLING YOUR WASHING MACHINE

# STEP 1

# Selecting a location

 


Before you install the washing machine, make sure the location:

- Has a hard, level surface without carpeting or flooring that may obstruct ventilation
- Is away from direct sunlight
- Has adequate ventilation
- Will not be freezing (below 32 °F or 0 °C)
- · Is away from heat sources such as oil or gas
- · Has enough space so that the washing machine doesn't stand on its power cord










# setting up your washing machine

# STEP 2

# Removing the shipping bolts

Before installing the washing machine, you must remove the five shipping bolts from the back of the unit.


1. Loosen all the bolts with the supplied wrench.

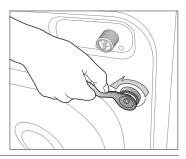

2. Hold the bolt with the spanner and pull it through the wide section of the hole. Repeat for each bolt.



3. Fill the holes with the supplied plastic covers.

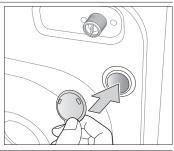

**4.** Store the shipping bolts away safely in case you have to move the washing machine in the future.

Packaging materials can be dangerous to children; keep all packaging material (plastic bags, polystyrene, etc.) well out of the reach of children.








# STEP 3

# Adjusting the levelling feet

When installing your washing machine, ensure that the power plug, the water supply and the drain are easily accessible.

- **1.** Slide the washing machine into position.
- 2. Level your washing machine by turning the leveling feet in and out as necessary by hand.

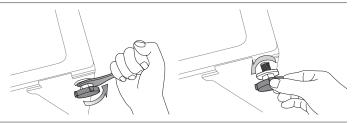

3. When your washing machine is level, tighten the nuts using the wrench supplied with your washing machine.




# STEP 4

# Connecting the water and drain

# Connecting the water supply hose

- 1. Take the L-shaped arm fitting for the cold water supply hose and connect it to the cold water supply intake on the back of the machine. Tighten by hand.
- The water supply hose must be connected to the washing machine at one end and to the water tap at the other. Do not stretch the water supply hose. If the hose is too short, replace the hose with a longer, high pressure hose.
- 2. Connect the other end of the cold water supply hose to your sink's cold water tap and tighten it by hand. If necessary, you can reposition the water supply hose at the washing machine end by loosening the fitting, rotating the hose, and retightening the fitting.

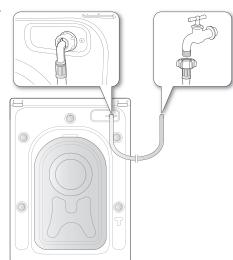

# For selected models with an additional hot water intake:

- 1. Take the red L-shaped arm fitting for the hot water supply hose and connect it to the hot water supply intake on the back of the machine. Tighten by hand.
- 2. Connect the other end of the hot water supply hose to your sink's hot water tap and tighten it by hand.
- 3. Use a Y-piece if you only want to use cold water.




setting up your new washing machine \_13




# setting up your washing machine

# Connecting the water supply hose (selected models)


1. Remove the adaptor from the water supply hose.

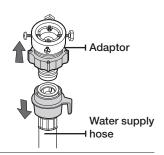

 2. First, using a '+' type screwdriver, loosen the four screws on the adaptor. Next, take the adaptor and turn part (2) following the arrow until there is a 5 mm gap.




**3.** Connect the adaptor to the water tap by tightening the screws firmly while lifting the adaptor upwards. Turn part (2) following the arrow and connect (1) and (2).

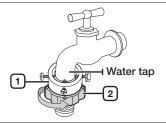


**4.** Connect the water supply hose to the adaptor. When you release part (3), the hose automatically connects to the adaptor making a 'click' sound.



After you have connected the water supply hose to the adaptor, ensure that it is connected correctly by pulling the water supply hose downwards.

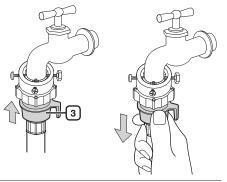

 Connect the other end of the water supply hose to the inlet water valve at the rear of the washing machine. Screw the hose clockwise all the way in.










**6.** Turn on the water supply and ensure that no water leaks from the water valve, tap or adaptor. If there is a water leaks, repeat the previous steps.

Do not use your washing machine if there is a water leak. This may cause electric shock or injury.

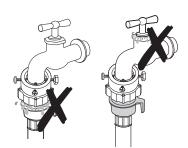

 If the water tap has a screw type tap, connect the water supply hose to the tap as shown.



Use the most conventional type of tap for the water supply. In case the tap is square or too big, remove the spacing ring before inserting the tap into the adaptor.








# setting up your washing machine

# Connecting the drain hose

The end of the drain hose can be positioned in three ways:

1. Over the edge of a wash basin: The drain hose must be placed at a height of between 60 and 90 cm. To keep the drain hose spout bent, use the supplied plastic hose guide. Secure the guide to the wall with a hook or to the tap with a piece of string to prevent the drain hose from moving.

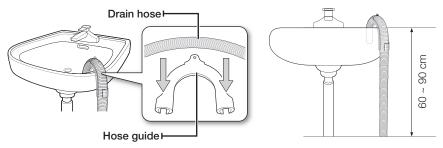

- 2. In a sink drain pipe branch: The drain pipe branch must be above the sink siphon so that the end of the hose is at least 60 cm above the ground.
- **3.** In a drain pipe: We recommend using a 65 cm high vertical pipe; it must be no shorter than 60 cm and no longer than 90 cm.

# STEP 5

# Powering your washing machine

Plug the power cord into a wall sockets, a 230 volt 50 Hz approved electrical outlet protected by a 15-amp fuse or comparable circuit breaker. (For more information on electrical and grounding requirements, see page 10.)







 
With your new Samsung washing machine, the hardest part of doing laundry will be deciding which load to wash first.

# WASHING FOR THE FIRST TIME



Before washing laundry for the first time, you must run a complete empty cycle (i.e. no laundry).

- 1. Press the **Power** button.
- 2. Add a little detergent to the detergent compartment (II) in the detergent drawer.
- 3. Turn on the water supply to the washing machine.
- 4. Press the Start/Pause button.





**Compartment** ①: Detergent for prewash, or starch.

Compartment (ii): Detergent for the main wash, water softener, pre-soaking agent, bleach and stain removal product.

Compartment ®: Additives, e.g. fabric softener or former (fill no higher than lower edge (MAX)

# BASIC INSTRUCTIONS



Do not overload the washing machine. To determine the load capacity for each type of RNING laundry, refer to the chart on page 24.



- Make sure that laundry is not caught in the door, as this may cause a water leak.
- Washing detergent may remain in the front rubber part of the washer after a wash cycle. Remove any remaining detergent, as they may cause a water leak.
- Do not wash water-proofed items.
- 2. Close the door until it latches.
- 3. Turn the power on.
- **4.** Add detergent and additives to the dispenser drawer.
- **5.** Select the appropriate cycle and options for the load. The Wash Indicator light will illuminate and the estimated cycle time will appear in the display.
- 6. Press the Start/Pause button.








# washing a load of laundry

# USING THE CONTROL PANEL

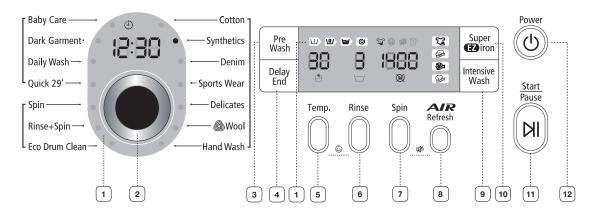

# 1 DIGITAL GRAPHIC DISPLAY

Displays the remaining wash cycle time, all cycle information, and error messages.

Select the tumble pattern and spin speed for the cycle.



For detailed information, refer to "Washing clothes using the cycle selector". (see page 22)

**Cotton** - For averagely or lightly soiled cottons, bed linen, table linen, underwear, towels, shirts, etc.

**Synthetics** - For averagely or lightly soiled blouses, shirts, etc., made of polyester (diolen, trevira), polyamide (perlon, nylon) or other similar blends.

**Denim** - A higher water level in the main wash and extra rinse ensure that no washing powder remains that may mark your clothing.

**Sports Wear** - Use for water-proofed or proofed garments to keep their good looks and fresh feel.

**Delicates** - For sheer fabrics, brassieres, lingerie, dresses, shirts and blouses. For best results, use liquid detergent.

Wool - Only for machine-washable wool. A load should be less than 2.0 kg.

- The wool course washes the laundry using gentle cradling actions.
   During the wash, the gentle cradling and soaking actions are continued to protect the wool fibers from shrinkage / distortion and for a super gentle clean. This stop operation is not a problem.
- Neutral detergent is recommended for wool course, for improved washing results and for improved care of the wool fibers.



The wool wash cycle of this machine has been approved by Woolmark for the washing of machine-washable Woolmark products provided that the products are washed according to the instructions on the garment label and those issued by the manufacturer of this washing machine, M0509 (Certificate Number issued by IWS NOM INEE Co., Ltd.)

**Handwash** - A very light wash cycle as gentle as a hand wash.

**Baby Care** - High temperature wash and extra rinses ensure that no washing powder remains to mark your thin clothes.

**Dark Garment** - Additional rinses and reduced spinning ensure that your favourite dark clothes are washed gently and rinsed thoroughly.

Daily Wash - Use for everyday items such as underwear and shirts.







**CYCLE SELECTOR** 



	Quick 29' - For lightly soiled garments that you require quickly.  Spin - Performs an additional spin cycle to remove more water.  Rinse + Spin - Use for a load that needs rinsing only or to add rinse-added fabric softener to a load.  Eco Drum Clean - Use for drum cleaning. It cleanses drum of dirt and bacteria. Regular use (after every 40 washes) is recommended. No detergent or bleach needed.		
PREWASH SELECTION BUTTON		ash. Pre-wash is only available with: ts Wear, Baby Care, Dark Garment,	
DELAY END SELECTION BUTTON	options (from 3 hours to 19 hour	ycle through the available Delay End s in one hour increments). time when the wash cycle will be	
TEMPERATURE SELECTION BUTTON	Press this button repeatedly to c temperature options: (Cold Water 별, 30 $^{\circ}$ C, 40 $^{\circ}$ C , 60	-	
6 RINSE SELECTION BUTTON	Press this button to add addition of rinse cycles is five.	al rinse cycles. The maximum number	
	Press the button repeatedly to cyspin cycle.	ycle through the available speeds for the	
0011100110011	WF9904 / WF9804	☐, Ø, 400, 800, 1200, 1400 rpm	
7 SPIN SELECTION BUTTON	"No spin 💇" - The laundry remains in the drum and no spin cycle is performed after the final drain. "Rinse Hold 🗂" -The laundry remains soaking in the final rinse water. Before the laundry can be unloaded, either a Drain or Spin cycle must be performed.		
AIR REFRESH SELECTION BUTTON	Press this button to refresh your clothing and stuff from everyday life. The Air Refresh cycle can refresh them without water and makes them ready to wear again.  "Knitwear " - Refresh knitwear such as knitted sweaters and pullovers as well as shirts and blouses that can be refreshed in 30 mins.  "Suit " - Refresh business suits and clothes. This also applies to casual jackets and light overcoats.  "Bedding " - Refresh and make fluffier bedding such as light blankets, bed linen and pillows.		
9 INTENSIVE WASH SELECTION BUTTON	Press this button when the launc washed intensively. The cycle tin	dry is heavily soiled and needs to be ne is increased for each cycle.	
SUPER EZ IRON SELECTION BUTTON	This Option reduces the creases of your wash load at the end of the washing cycle. Your wash load will be treated by the help of a gentle warm air flow and adjusted spin speed. We recommend to use this function for wash loads up to 4kg. For the best result, peg out the washing.  • Super EZ Iron is selectable with all wash programs except for ECO Drum Clean, Wool and Handwash.  • Selectable max spin speed for Cotton, Baby Care and Quick 29 with Super EZ iron option is limited to 1200 rpm (1400rpm model- This only applies to models with a maximum spin speed of 1400 rpm.)  • Selectable max spin speed for Sports wear is limited to 800 rpm with Super EZ Iron option.  • Rinse Hold(☐) and No Spin(☒) is not selectable with Super EZ Iron option.		
START/PAUSE SELECTION BUTTON	Press to pause and restart a cyc	le.	







**POWER BUTTON** 

Press it once to turn your washing machine on, press it again to turn your washing machine off.

If the washing machine is left on for more than 10 minutes without any buttons being touched, the power automatically turns off.

# Child lock


The Child Lock function allows you to lock the buttons so that the wash cycle you've chosen can't be changed.

# Activating/Deactivating

If you want to activate or deactivate the Child Lock function, press the Temp. and Rinse buttons at the same time for 3 seconds. "Child Lock "will be lit when this feature is activated.



When the Child Lock function is activated, only the **Power** button works. The Child Lock function remains on even after the power is turned on and off or after the disconnecting and reconnecting the power cord.

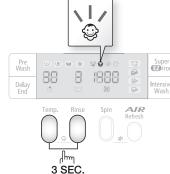


# Sound off

The Sound Off function can be selected during all courses. When this function is selected, sound is turned off for all courses. Even if the power is turned on and off repeatedly, the setting is retained.

# Activating/Deactivating

If you want to activate or deactivate the Sound Off function, press the Spin and Air Refresh buttons at the same time for 3 seconds. The "Sound Off "w" will be lit when this feature is activated.

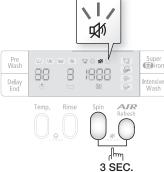

# Delay end

 
You can set the washing machine to finish your wash automatically at a later time, choosing a delay of between 3 to 19 hours (in 1 hour increments). The hour displayed indicates the time at which the wash will be finished.

- 1. Manually or automatically set your washing machine according to the type of laundry you are washing.
- 2. Press the **Delay End** button repeatedly until the delay time is set.
- 3. Press the Start/Pause button. The "Delay End 🕘" indicator will be lit, and the clock will begin counting down until it reaches the set time.
- 4. To cancel a Delay End function, press the Power button and then turn the washing machine on again.













# Air Refresh

Air Refresh can refresh laundry without using water owing to its powerful airing system. Clothing that can be refreshed includes woolen coats, cotton or jumpers, sweaters and suits. (Two items or less (less than 1 kg)

- 1. Open the door, place the laundry into the washing machine and close the door.
- **2.** Press the **Power** button.
- 3. Press the Air Refresh button.
  - Each time the button is pressed, the operating mode cycles through the following sequence: Knitwear → Suit → Bedding → knitwear → ...

MODE	CYCLE TIME
Bedding	46 min
Suit	39 min
Knitwear	29 min

- When one of these options has been selected, no other button can be selected and you
  can only select the delay end time from between 3:00 19:00.
- **4.** Close the door and press the **Start/Pause** button.



- When there is water in the tub, Air Refresh button cannot be selected. Drain the water and select Air Refresh button.
- Press the **Start/Pause** or **Power** button to remove the laundry.
- Fragrance or dryer sheets can be used with Air Refresh programs to add fragrance to your refreshed laundry (one sheet per one or two items).



Avoid Air Refresh the following clothes:

- Sensitive clothes made of leather, mink, fur, silk, etc.
- Underwear trimmed with lace, 'glued' doll cushions, and dress suits may have their decorations loosened.
- Clothes trimmed with buttons can cause them to break.
- Starchy clothes can become deformed.
- Hard bedding such as a wooden pillows (neck-rest)
  - Pillows or blankets filled with plastic or starch rather than cotton
  - Electric blankets
- Furry blankets
- Bulky blankets
- Latex pillow







# washing a load of laundry

# Washing clothes using the cycle selector

Your new washing machine makes washing clothes easy, using Samsung's "Fuzzy Control" automatic control system. When you select a wash program, the machine will set the correct temperature, washing time, and washing speed.

- 1. Turn on your sink's water tap.
- 2. Press the Power button.
- 3. Open the door.
- **4.** Load the articles one at a time loosely into the drum, without overfilling it.
- **5.** Close the door.
- **6.** Add detergent, softener, and pre-wash detergent (if necessary) into the appropriate compartments.



Pre-wash is only available when selecting the Cotton, Synthetics, Denim, Sports Wear, Baby Care, Dark Garment and Daily Wash cycles. It is only necessary if your clothing is heavily soiled.

- 7. Use the Cycle Selector to select the appropriate cycle according to the type of material: Cotton, Synthetics, Denim, Sports Wear, Delicates, Wool, Hand Wash, Baby Care, Dark Garment, Daily Wash, Quick 29'. The relevant indicators will illuminate on the control panel.
- **8.** At this time, you can control the wash temperature, the amount of rinses, the spinning speed, and the delay time by pressing the appropriate option button.
- Press the Start/Pause button and the wash will begin. The process indicator will light up and the remaining time for the cycle will appear in the display.

## Pause Option

Within 5 minutes of starting a wash, it is possible to add/remove laundry items.

- 1. Press the **Start/Pause** button to unlock the door.
- 2. After closing the door, press the **Start/Pause** button to restart the wash.

## When the cycle is finished:

After the total cycle has finished, the power will turn off automatically.

- 1. Open the door.
- 2. Remove laundry.







# Washing clothes manually

You can wash clothes manually without using the Cycle Selector.

- **1.** Turn the water supply on.
- **2.** Press the **Power** button on the washing machine.
- **3.** Open the door.
- **4.** Load the articles loosely into the drum one at a time, without overfilling it.
- **5.** Close the door.
- **6.** Add detergent and, if necessary, softener or prewash detergent, into the appropriate compartments.
- 7. Press the **Temp.** button to select the temperature. (Cold water, 30  $^{\circ}$ C, 40  $^{\circ}$ C, 60  $^{\circ}$ C, 95  $^{\circ}$ C)
- **8.** Press the **Rinse** button to select the required number of rinse cycles. The maximum number of rinse cycles is five. The wash duration is increased accordingly.
- 9. Press the Spin button to select the spin speed. The rinse hold function allows you to remove items that are still wet from the washing machine. (※: No Spin, ☐: Rinse Hold)
- **10.** Press the **Delay End** button repeatedly to cycle through the available Delay End options (from 3 hour to 19 hours in one hour increments). The hour displayed indicates the time at which the wash will be finished.
- 11. Press the **Start/Pause** button and the machine will begin the cycle.







# washing a load of laundry

# LAUNDRY GUIDELINES

Follow these simple guidelines for the cleanest laundry and the most efficient wash.



# Sort and wash your laundry according to the following criteria:

- Care Label: Sort laundry into cottons, mixed fibres, synthetics, silks, wools and rayons.
- Colour: Divide whites and colours. Wash new colour items separately.
- Size: Placing items of different sizes in the same load will improve the wash action.
- Sensitivity: Wash delicate items separately, using the Delicate wash cycle for pure, new
  woollen items, curtains and silk articles. Check the labels on the items you are washing or
  refer to the fabric care chart in the appendix.

## **Emptying pockets**

Before each wash, empty all the pockets of your laundry. Small, irregularly shaped hard objects, such as coins, knives, pins, and paperclips could damage your washing machine. Do not wash clothing with large buckles, buttons, or other heavy metal objects.

Metal on clothing may damage your clothing as well as the tub. Turn clothing with buttons and embroidered clothes inside out before washing them. If zips of pants and jackets are open while washing, the spin basket may be damaged. Zips should be closed and fixed with a string before washing.

Clothing with long strings may become entangled with other clothes damaging them. Be sure to fix the strings before starting the wash.

## Prewashing cotton

Your new washing machine, combined with modern detergents, will give perfect washing results, thus saving energy, time, water and detergent. However, if your cotton is particularly dirty, prewash with a protein-based detergent.

## Determining the load capacity

Do not overload the washing machine or your laundry may not wash properly. Use the chart below to determine the load capacity for the type of laundry you are washing.

 
Fabric Type	Load Capacity		
Model	WF9804	WF9904	
Cotton - average/lightly soiled - heavily soiled	8.0kg	9.0kg	
Synthetics	3.0 kg	3.0 kg	
Denim	3.0 kg	3.0 kg	
Sports Wear	2.5 kg	2.5 kg	
Delicates	2.5 kg	2.5 kg	
Wool	2.0 kg	2.0 kg	



- When the laundry is unbalanced ("UE" lights up on the display), redistribute the load. If the laundry is unbalanced, the spin efficiency may be degraded.
- When washing Bedding or Duvets, the wash time may be lengthened or the spin efficiency may be degraded.
- For Bedding or Duvets, the recommended load capacity is 1,8(kg) or less.











# Make sure to insert brassieres (water washable) into a laundry net (to be purchased additionally).

- The metal parts of the brassieres may break through the material and damage the laundry. Therefore make sure to place them inside a fine laundry net.
- Small, light clothing such as socks, gloves, stockings and handkerchiefs may become caught around the door. Place them inside a fine laundry net.





Do not wash the laundry net by itself without other laundry. This may cause abnormal CAUTION vibrations that could move the washing machine and cause an accident resulting in injury.

# DETERGENT AND ADDITIVES INFORMATION

# Which detergent to use

The type of detergent you should use is based on the type of fabric (cotton, synthetic, delicate items, wool), colour, wash temperature, and degree of soiling. Always use "low suds" laundry detergent, which is designed for automatic washing machines.

 
Follow the detergent manufacturer's recommendations based on the weight of the laundry, the degree of soiling, and the hardness of the water in your area. If you do not know how hard your water is, enquire at your local water authority.




Do not use detergent that has hardended or solidified as the detergent may remain in the rinse cycle. It may cause your washing machine to not rinse properly or result in the overflow becoming blocked.

# **Detergent drawer**

Your washing machine has separate compartments for dispensing detergent and fabric softener. Add all laundry additives to the correct compartment before starting your washing machine.



 
- 1. Pull out the detergent drawer on the left side of the control
- 2. Add the recommended amount of laundry detergent directly into the detergent compartment (11) before starting your washing machine.
- 3. Add the recommended amount of fabric softener into the softener compartment ® if required.
- 4. When using the Prewash option, add the recommended amount of laundry detergent into the prewash compartment (I).




- Tablet and capsule type detergents
- Detergents using a ball and net



Concentrated or thick fabric softener and conditioner must be diluted with a little water before being poured into the dispenser (prevents the overflow from becoming blocked.)

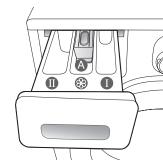

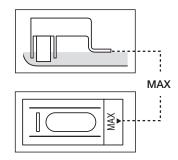

washing a load of laundry 25









# cleaning and maintaining your washing machine

Keeping your washing machine clean improves its performance, wards off unnecessary repairs, and lengthens its life.


# **ECO DRUM CLEAN**

This course is a self-cleaning course that removes mold that may occur inside the washing machine.

- 1. Press the **Power** button.
- 2. Turn the Cycle Selector to the ECO Drum Clean course.
  - You can only use the Delay End function.
  - The water temperature during the ECO Drum Clean is set to 75 °C.



- Place the appropriate amount of cleansing agent into the detergent compartment and close the detergent drawer (when cleaning the drum using a cleansing agent).
  - Be sure to use the recommended cleansing agent for cleaning the drum.
  - There are powder-type and liquid-type drum cleansing agents.

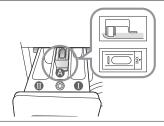


Eco Drum Clean -



If you press the Start/Pause button, the ECO Drum Clean course begins.



 - Using the ECO Drum Clean course, you can clean the drum without using a cleansing agent.
- Never use the ECO Drum Clean course when laundry is in the washing machine. This may result in damage to the texture or a problem with the washing machine.
- Use only 1/10 of the amount of the drum cleansing agent recommended by the cleansing agent manufacturer.
- Since using a chlorine bleaching agent may discolor the product, be sure to use only oxygen bleaching agents.
- Powder-type cleansing agent: Use a [powder-type bleaching agent] or a [cleansing agent for drum cleaning only].
- Liquid-type cleansing agent: Use a [liquid-type oxygen bleaching agent] or a [cleansing agent for drum cleaning only].



- If the "ECO Drum Clean" indicator on the display and the lamp on the Cycle Selector are lit after a wash, it indicates that tub (drum) cleaning is required. In this case, remove the laundry from the washing machine, turn the power on, and clean the drum by performing the ECO Drum Clean course.
- If you do not perform the ECO Drum Clean course, the
   "ECO Drum Clean" indicator on the display and the lamp
   on the Cycle Selector are turned off. However, the "ECO
   Drum Clean" indicator on the display and the lamp on the
   Cycle Selector are turned on again after two washes are
   performed. However, this will not result in a problem with the
   washing machine.
- Although generally, the ECO Drum Clean Auto Alarm appears once a month or so, the frequency may differ depending on the number of times the washing machine is used.



depending on the namber of times the washing that

26 cleaning and maintaining your washing machine









# DRAINING THE WASHING MACHINE IN AN EMERGENCY


- 1. Unplug the washing machine from the power supply.
- 2. Open the filter cover using a coin or a key.

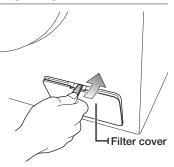

3. Unscrew the emergency drain cap by turning it to the left.

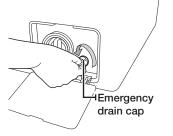

- **4.** Hold the cap on the end of the emergency drain tube and slowly pull it out about 15 cm.
- 5. Allow all the water to flow into a bowl.
- **6.** Reinsert the drain tube and screw the cap back on.
- **7.** Replace the filter-cover.

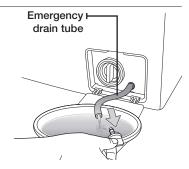

# **CLEANING THE EXTERIOR**

- **1.** Wipe the washing machine surfaces, including the control panel, with a soft cloth using a nonabrasive household detergent.
- 2. Use a soft cloth to dry the surfaces.
- 3. Do not pour water onto the washing machine.









# cleaning and maintaining your washing machine

# CLEANING THE DETERGENT DRAWER AND DRAWER RECESS

- **1.** Press the release lever on the inside of the detergent drawer and pull the drawer out.
- 2. Remove the liquid detergent divider from the detergent drawer

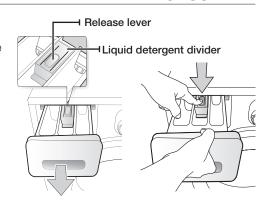

3. Wash all parts under running water.

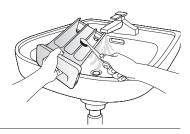



- 5. Replace the liquid detergent divider by pushing it firmly into the drawer.
- **6.** Push the drawer back into place.
- 7. To remove any remaining detergent, perform a rinse cycle without any laundry in the drum.











# CLEANING THE DEBRIS FILTER

We recommend cleaning the debris filter 5 or 6 times a year, or when the error message of "5E" is displayed. (Refer to "Draining the washing machine in an emergency" in the previous page.)

- 1. Open the filter cover by using a key or coin.
- Unscrew the emergency drain cap by turning it to the left and drain off all the water.
- 3. Unscrew the debris filter cap.

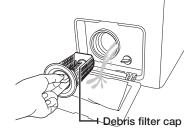

- Wash any dirt or other material from the debris filter. Make sure the drain pump propeller behind the debris filter is not blocked.
- 5. Replace the debris filter cap.
- 6. Replace the filter cover.

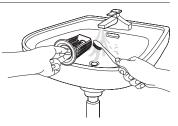

# CLEANING THE WATER HOSE MESH FILTER

You should clean the water hose mesh filter at least once a year, or when the error message of "4E" is displayed:

- 1. Turn off the water supply to the washing machine.
- 2. Unscrew the hose from the back of the washing machine. To prevent water from gushing out due to the air pressure in the hose, cover the hose with a cloth.
- 3. Gently pull out the mesh filter from the end of the hose using a pair of pliers and rinse it under water until clean. Also clean inside and outside the threaded connector.
- 4. Push the filter back into place.
- 5. Screw the hose back onto the washing machine.
- **6.** Make sure the connections are watertight and turn on the tap.

# REPAIRING A FROZEN WASHING MACHINE

If the temperature drops below freezing and your washing machine is frozen:

- 1. Unplug the washing machine.
- 2. Pour warm water over the tap to loosen the water supply hose.
- **3.** Remove the water supply hose and soak it in warm water.
- 4. Pour warm water into the washing machine drum and let it sit for 10 minutes.
- 5. Reconnect the water supply hose to the water tap and check if the water supply and drain are operating normal.

# STORING YOUR WASHING MACHINE

If you need to store your washing machine for an extended time, it's better to drain and disconnect it. Washing machines can be damaged if water is left in the hoses and internal components before storage.

- 1. Select the Quick 29' cycle and add bleach to the bleach compartment. Run your washing machine through the cycle without a load.
- 2. Turn the water taps off and disconnect the inlet hoses.
- **3.** Unplug your washing machine from the electrical outlet, and leave your washing machine door open to allow air to circulate inside the tumbler.
- If your washing machine has been stored in below-freezing temperatures, allow time for any leftover water in your washing machine to thaw out before using it.

troubleshooting and information codes \_29







# troubleshooting and information codes

# CHECK THESE POINTS IF YOUR WASHING MACHINE...

PROBLEM	SOLUTION
Will not start	<ul> <li>Make sure your washing machine is plugged in.</li> <li>Make sure the door is firmly closed.</li> <li>Make sure the water source tap(s) are turned on.</li> <li>Make sure to press the Start/Pause button.</li> </ul>
Has no water or not enough water	<ul> <li>Turn the water tap on fully.</li> <li>Make sure the water source hose is not frozen.</li> <li>Straighten the water intake hoses.</li> <li>Clean the filter on the water intake hose.</li> </ul>
Has detergent remaining in the detergent drawer after the wash cycle is complete	<ul> <li>Make sure your washing machine is running with sufficient water pressure.</li> <li>Make sure the detergent is added to the center of the detergent drawer.</li> </ul>
Vibrates or is too noisy	<ul> <li>Make sure your washing machine is on a level surface. If the surface is not level, adjust the washing machine feet to level the appliance.</li> <li>Make sure that the shipping bolts are removed.</li> <li>Make sure your washing machine is not touching any other object.</li> <li>Make sure the laundry load is balanced.</li> </ul>
The washing machine does not drain and/or spin	<ul><li>Straighten the drain hose. Eliminate kinked hoses.</li><li>Make sure the debris filter is not clogged.</li></ul>
Door is locked shut or will not open.	The door will not open until 3 minutes after the machine stops or the power turns off.

If the problem persists, contact your local Samsung Customer Service.







# **INFORMATION CODES**

If your washing machine malfunctions, you may see an information code on the display. If this happens, please check the table below and try the suggested solution before calling Customer Service.

CODE SYMBOL	SOLUTION	
dE	Close the door.	
4E	<ul><li>Make sure the source water tap is turned on.</li><li>Check the water pressure.</li></ul>	
5E	<ul><li>Clean the debris filter.</li><li>Make sure the drainage hose is installed correctly.</li></ul>	
UE	The laundry load is unbalanced. Redistribute the load. If only one item of clothing needs washing, such as a bathrobe or pair of jeans, the final spin result might be unsatisfactory and an "UE" error message will be shown in the display window.	
cE/3E	Call the after-sales service.	

For any codes not listed above, or if the suggested solution doesn't fix the problem, call your Samsung Service Centre or local Samsung dealer.







# cycle chart

# **CYCLE CHART**

(• user option)

	Max Io	oad(kg)		DETERGENT			
PROGRAM	WF9804RWE	WF9904RWE	Pre-wash	wash	Softener	Silver wash	Max Temp (°C)
Cotton	8.0	9.0	•	yes	•	•	95
Synthetics	3.0	3.0	•	yes	•	•	60
Denim	3.0	3.0	•	yes	•	•	60
Sports Wear	2.5	2.5	•	yes	•	•	60
Delicates	2.5	2.5	-	yes	-	-	40
Wool	2.0	2.0	-	yes	-	-	40
Handwash	2.0	2.0	-	yes	•	-	40
Baby Care	4.0	4.0	•	yes	•	•	95
Dark Garment	4.0	4.0	•	yes	•	•	40
Daily Wash	4.0	4.0	•	yes	•	•	60
Quick 29'	3.0	3.0	-	yes	•	-	60
Eco Clean Drum	-	-	-	-	-	-	-

	Spin Speed(MAX) rpm			0.1.11
PROGRAM	WF9904RWE	Super EZ Iron	Delay end	Cycle time (min)
Cotton	1400	•	•	120
Synthetics	1200	•	•	90
Denim	800	•	•	78
Sports Wear	1200	•	•	73
Delicates	800	•	•	50
Wool	800	-	•	38
Handwash	400	-	•	31
Baby Care	1400	•	•	133
Dark Garment	1200	•	•	78
Daily Wash	1200	•	•	70
Quick 29'	1400	•	•	29
Eco Clean Drum	-	-	-	-

- **1.** A cycle with a prewash takes approx. 15 minutes longer.
- The cycle duration data has been measured under the conditions specified in Standard IEC 60456 / EN 60456.
- **3.** Course time in individual homes may differ from the values given in the table due to variations in the pressure and temperature of the water supply, the load and the type of laundry.
- 4. When the Intensive Wash function is selected, the cycle time is increased for each cycle.











# **FABRIC CARE CHART**

The following symbols provide garment care directions. The care labels include four symbols in this order: washing, bleaching, drying and ironing (and dry cleaning when necessary). The use of symbols ensures consistency among garment manufacturers of domestic and imported items. Follow the care label directions to maximize garment life and reduce laundery problems.

	Resistant material	$\overline{\cdot}$	Can be ironed at 100 °C max
	Delicate fabric	$\bowtie$	Do not iron
95 95	Item may be washed at 95 °C	A	Can be dry cleaned using any solvent
60) 600	Item may be washed at 60 °C	P	Dry clean with perchloride, lighter fuel, pure alcohol or R113 only
40) 40)	Item may be washed at 40 °C	F	Dry clean with aviation fuel, pure alcohol or R113 only
30 30	Item may be washed at 30 °C	$\otimes$	Do not dry clean
	Item may be hand washed		Dry flat
$\bowtie$	Dry clean only		Can be hung to dry
CI	Can be bleached in cold water		Dry on clothes hanger
X	Do not bleach	$\odot$	Tumble dry, normal heat
	Can be ironed at 200 °C max	<u></u>	Tumble dry, reduced heat
<u></u>	Can be ironed at 150 °C max		Do not tumble dry

# PROTECTING THE ENVIRONMENT

- This appliance is manufactured from recyclable materials. If you decide to dispose of this appliance,
  please observe local waste disposal regulations. Cut off the power cord so that the appliance cannot be
  connected to a power source. Remove the door so that animals and small children cannot get trapped
  inside the appliance.
- Do not exceed the detergent quantities recommended in the detergent manu-facturers' instructions.
- Use stain removal products and bleaches before the wash cycle only when strictly necessary.
- Save water and electricity by only washing full loads (the exact amount depends upon the program
  used).

# **DECLARATION OF CONFORMITY**

This appliance complies with European safety standards, EC directive 93/68 and EN Standard 60335.









# **SPECIFICATIONS**

ТҮРЕ			FRONT LOADING WASHING MACHINE	
DIMENCIONIC			WF9904RWE	
DIMENSIONS			W598mm X D600mm X H844mm	
WATER PRESSURE			50 kPa ~ 800 kPa	
WATER VOLUME			63 l	
NET WEIGHT			WF9904RWE	
NET WEIGHT			70 kg	
WASH AND SPIN CAPA	WASH AND SPIN CAPACITY 9.0kg		9.0kg	
	MODEL		WF9904RWE	
	WASHING		220 V	
			240 V	
POWER	WASH AND HEATING		220 V	
CONSUMPTION			240 V	
	SPIN -	MODEL	WF9904RWE	
		230V	600 W	
	PUMPING		34 W	
	MODEL		WF9904RWE	
PACKAGE WEIGHT	PAPER		2.5 kg	
		PLASTIC	1.0 kg	
SPIN REVOLUTIONS	MODEL		WF9904RWE	
SFIN NEVOLUTIONS		rpm	1400	

The appearance and specifications of the product are subject to change without prior notice for purposes of product enhancement.







# **SPECIFICATIONS**

ТҮРЕ			FRONT LOADING WASHING MACHINE	
DIMENGIONIO			WF9804RWE	
DIMENSIONS			W598mm X D600mm X H844mm	
WATER PRESSURE			50 kPa ~ 800 kPa	
WATER VOLUME			63 ℓ	
NET WEIGHT			WF9804RWE	
NET WEIGHT			70 kg	
WASH AND SPIN CAPA	CITY		8.0kg	
	MODEL		WF9804RWE	
	WASHING		220 V	
			240 V	
POWER	WASH AND HEATING		220 V	
CONSUMPTION			240 V	
	SPIN -	MODEL	WF9804RWE	
		230V	600 W	
		PUMPING	34 W	
	MODEL		WF9804RWE	
PACKAGE WEIGHT	PAPER		2.5 kg	
	PLASTIC		1.0 kg	
CDINI DEVOLUTIONS		MODEL	WF9804RWE	
SPIN REVOLUTIONS	rpm		1400	

The appearance and specifications of the product are subject to change without prior notice for purposes of product enhancement.













# QUESTIONS OR COMMENTS?

Country	CALL	OR VISIT US ONLINE AT
U.K	0845 SAMSUNG (7267864)	www.samsung.com/uk

Code No. DC68-02713A\_EN

